

LELO

F1s™

Developer's Kit

USER MANUAL

BEDIENUNGSANLEITUNG

MANUEL D'UTILISATION

MANUAL DE USUARIO

MANUALE D'USO


使用指南 - 使用說明書



**We're putting the future of sextech in your hands.
Experiment wisely, often, and with care.**

Congratulations on purchasing the F1s Developer's Kit. Before getting more closely acquainted with it, please take a moment to look through this user manual.


IMPORTANT: Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

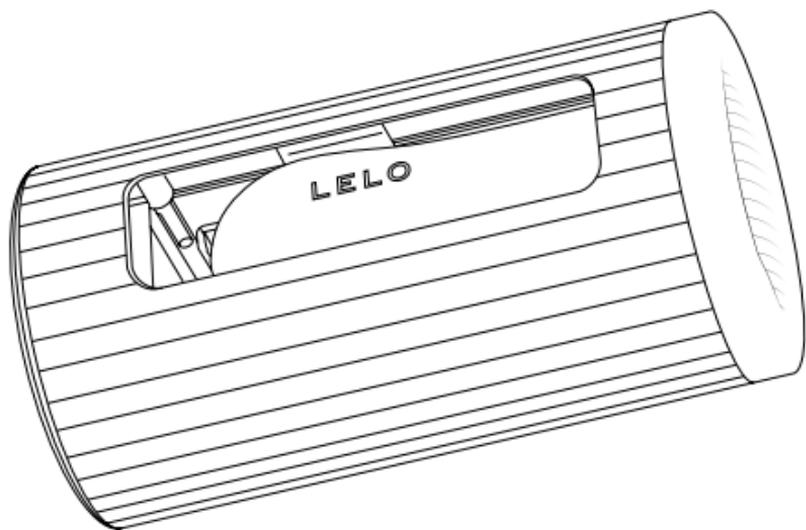

GETTING STARTED


- Before the first use, charge your F1s for 2 hours.
- Download the "LELO F1s" Demo app and make sure your phone's Bluetooth is enabled. **LELO has never and will never use or share your location information.** This feature is required by the operating system and not by LELO. Make sure it is charged until there is a steady glow (we recommend a 2 hour charge before use).
- Make sure the device is turned OFF (the lights are turned off). If the device is ON, press and hold the power button until the lights are off.
- Start the app and watch the introduction video or tap SKIP in the bottom right corner of the screen.
- The "connect device" screen will show up with the following message: "Press the button on the device to connect."
- Press the power button on the device. It should blink, signalling that the F1s is in connecting mode.
- The animation on the app will continue and a new "confirm connection" screen will appear with the following message: "Press the button on the device to confirm connection."
- Press the power button on your F1s once to confirm the connection.
- The device will vibrate for a second and then it will stop. This indicates that your F1s is connected to the app.
- The menu screen will display the following options: Play, About F1s, Legal and Disconnect. Press PLAY and the play screen will show up.
- Press the button at the bottom of the screen to start controlling your device.

4 • ENGLISH

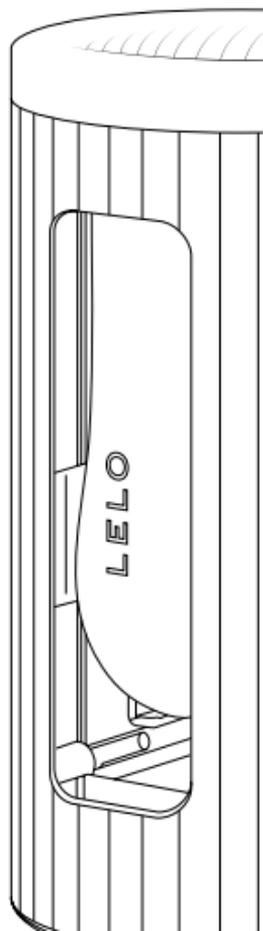


HOW TO USE F1s IN OFFLINE MODE

- Before the first use, charge your F1s for 2 hours.
- Once charged, press the center button to activate.
- A press of a button will start your device.
- Press the +/- button to strengthen or reduce vibrations to a level you are comfortable with.
- Holding down the center button for 3 seconds will turn off your F1s.
- Press and hold the + and – buttons together for 5 seconds to lock and unlock your F1s and avoid unintended activation.

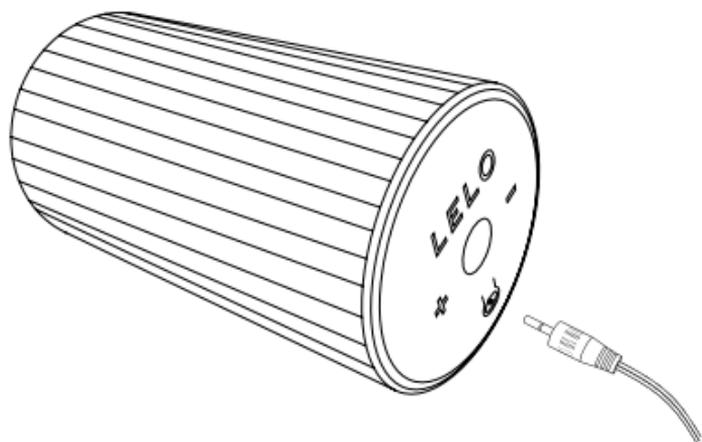

GETTING TO KNOW YOUR F1s Smart Performance Console

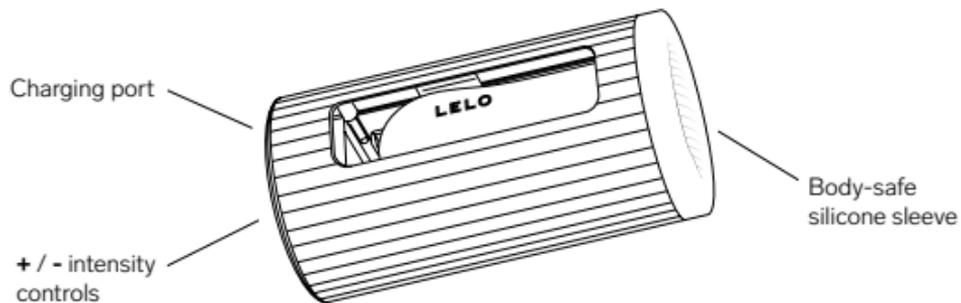

GETTING TO KNOW YOUR F1s Smart Performance Console

SENSONIC TECHNOLOGY

An exclusive LELO breakthrough, SenSonic technology offers 360 degrees of pleasure. Instead of standard vibrations, F1s emits powerful sonic waves that permeate deep into your penis, making it feel as though it were resonating from all directions all at once. And with the LELO app, you can adjust the intensity to your liking.

SenSonic™
TECHNOLOGY

CRUISE CONTROL

Cruise Control is designed to detect any deceleration slowing motion of the main motor and can boost the power up again via PWM (Pulse Wave Modulation). In doing so, Cruise Control ensures that you enjoy consistent power and intensity, no matter what. Control this and other device settings through the LELO app.


Cruise Control™
TECHNOLOGY

F1s Developer's Kit

This revolutionary open-source design enables you to capitalize on industry-leading technology from LELO. To get started, download the SDK and join a community of developers to build the sextech experience of your dreams.




BLUETOOTH
CONNECTED

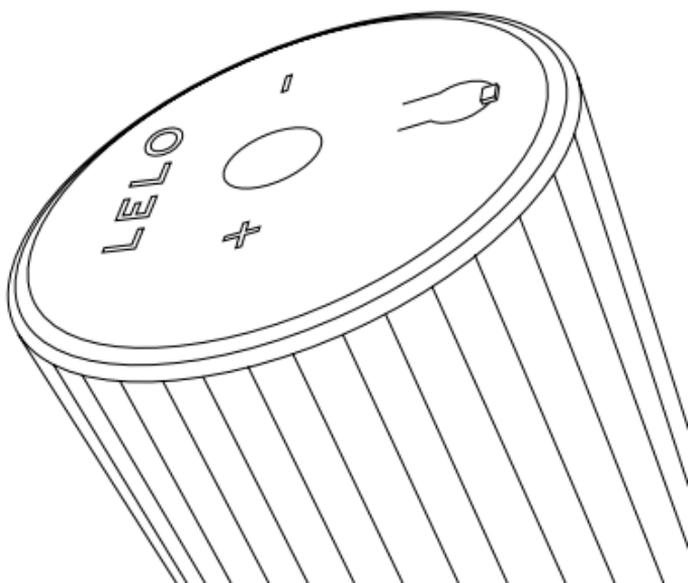

CHARGING YOUR F1s Smart Performance Console

- Insert the DC plug into the DC port at the top of your F1s.
- The LED on the interface of your F1s will pulse to indicate it is charging. When it is fully charged the LED will emit a steady glow.
- When the battery is running low, the LED on your F1s will emit a blinking white light.

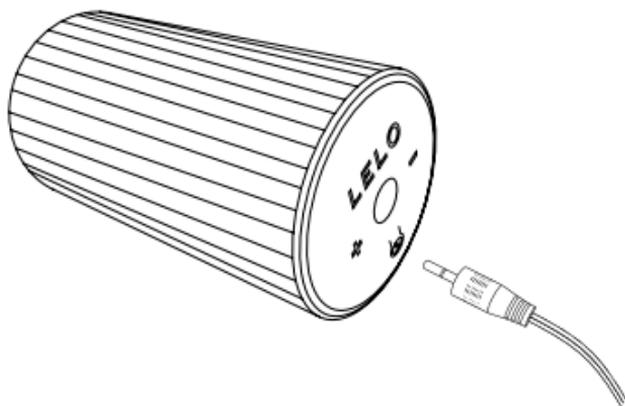

Only use original chargers provided by LELO with your F1s

CLEANING, STORAGE, AND SAFETY

Using F1s with hand creams or silicone-based lubricants may make the silicone permanently tacky.

F1s is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry. A cotton swab can be used to clean the inside of the 'mouth'.

Always clean your F1s thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your F1s trainer in direct sunlight and NEVER expose it to extreme heat. Store your F1s in a dust-free place and keep it away from products of other materials.

We recommend using 10 to 15 ml of water-based lubricant for every application, for a completely mind-blowing experience



TROUBLESHOOTING

The LED on your F1s does not pulse when the charger is connected?

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check your wall and DC sockets.

Your F1s does not activate when the center button is pressed?

- The battery is empty. Recharge your F1s.
- The interface of your F1s is locked. Hold down + and – together for 5 seconds.

If you experience any other problems with your F1s Developer's Kit or if you have any questions regarding operation, please contact: **customer@lelo.com**

SPECIFICATIONS

MATERIAL	Silicone, ABS, Aluminum alloy
BODY COLORS	Matte Black
INTERFACE	3-button interface
SENSORS	10
SWITCH OFF	Automatic
FREQUENCY	63Hz
BATTERY	Li-Ion 850mAh 3.7V
CHARGE TIME	2hr at 5.0V 700mA
USER TIME	2 hours
STANDBY TIME	Up to 90 days
SIZE	143mm x Ø71mm
INSERTABLE LENGTH	110.72 mm
WEIGHT (ONLY PRODUCT)	291.5g & 286.9g (Red)

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems): The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.



Disclaimer: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

LELO isn't responsible for third-party applications.

Model may be changed for improvements without notice.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

© 2019 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED FOR LELO IN CHINA

WEBSITE: WWW.LELO.COM

SUPPORT: CUSTOMERCARE@LELO.COM