

LELO

SONA™ 2 Sonic Clitoral Massager

USER MANUAL

BEDIENUNGSANLEITUNG

MANUEL D'UTILISATION

MANUAL DE USUARIO

MANUALE D'USO

使用指南 - 使用說明書



**Pure euphoria is toe-curling orgasms and sonic
power at the touch of a button.
Experiment wisely, often, and with care.**


Congratulations on acquiring SONA 2. Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT: Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

GETTING STARTED

- Before first use, charge your SONA 2 for 2 hours.
- Unlock by pressing and holding the + and - buttons simultaneously for 3 seconds until the light turns on.
- Press + button to turn on; press again to increase vibration strength.
- Press () button to switch between the 12 vibration patterns.
- Press – button to reduce vibration strength.
- Press and hold () button to turn off.

GETTING TO KNOW YOUR SONA 2

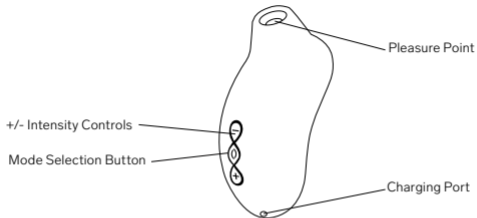

CRUISE CONTROL (For SONA 2 Cruise only)

Cruise Control is a fully automatic function, not a setting that requires you to turn it on or off. Cruise Control is designed to detect any slowing motion of the motor and can boost the motor up again via PWM (Pulse Wave Modulation). In doing so, Cruise Control ensures that you enjoy consistent power and intensity, even while SONA 2 is pressed firmly against your body.


Cruise Control™
TECHNOLOGY

USING YOUR SONA 2

- How to hold



- Where to place on the body

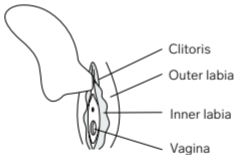


Tip: For an even more pleasurable experience, apply a liberal amount of LELO Personal Moisturizer to your body and to SONA 2 before and during use.



CHARGING YOUR SONA 2

- Insert the DC plug into the DC port at the base of your SONA 2.
- Insert the main plug into a wall socket. The LED on the interface of your SONA 2 will pulse to indicate it is charging. When it is fully charged (after 2 hours), the LED will emit a steady glow.
- When the battery is running low, the LED on your SONA 2 will emit a blinking white light.

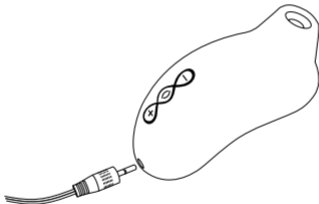

Only use original chargers provided by LELO with your SONA 2.

CLEANING, STORAGE, AND SAFETY

- Using SONA 2 with hand creams or silicone-based lubricants may make the silicone permanently tacky.
- SONA 2 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry.
- Always clean your SONA 2 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.
- Avoid leaving your SONA 2 in direct sunlight and NEVER expose it to extreme heat. Store your SONA 2 in a dust-free place and keep it away from products of other materials.

TROUBLESHOOTING

The LED on your SONA 2 does not pulse when the charger is connected:

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

Your SONA 2 does not activate when the center button is pressed:

- The battery is empty. Recharge your SONA 2.
- The interface of your SONA 2 is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your SONA 2 or if you have any questions regarding operation, please contact: **customer care@lelo.com**

SPECIFICATIONS

MATERIALS	Silicone, ABS
BODY COLORS	Purple, Cerise, Black
INTERFACE	3-button interface
SWITCH OFF	Automatic
FREQUENCY	75Hz
BATTERY	Li-ion 1050mAh 3.7V
CHARGE TIME	2.5h at 5.0V 750mA
USER TIME	Up to 2 hours
STANDBY TIME	Up to 90 days
SIZE	55.2 x 87.6 x 99.4mm
WEIGHT (ONLY PRODUCT)	135g

REGISTER WARRANTY

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at LELO.COM then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.



Disclaimer: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

© 2019 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED FOR LELO IN CHINA

WEBSITE: WWW.LELO.COM

SUPPORT: CUSTOMERCARE@LELO.COM

www.lelo.com