

HOW TO USE ODEN™

Oden™ is a vibrating couple's ring designed for a male partner to wear during intercourse. To wear, open Oden™'s flexible silicone ring and place it around the base of the penis when erect, with the flattened side of Oden™'s pleasure point against the abdomen and pointing upwards towards the navel. You will then be able to control vibrations via wireless remote, alternating between SenseMotion and 6 additional stimulation modes.




HOW TO USE SENSEMOTION™ ?

SenseMotion™ Technology offers an unprecedented way to interact with personal massagers, where vibration speed and intensity can be controlled via movement alone. This can range through tilting, shaking or sweeping the wireless controller through different movements, which in turn prompts a response in your Lyla™, Oden™ and Tiani™. More than this, the controller mirrors the vibrations you are creating, which means you can feel what a partner is experiencing from a range of up to 12 meters / 39 feet.

GETTING STARTED: Press **+** to turn on your wireless controller. Press **(∞)** to turn on your personal massager and initiate.



Your massager and controller will connect within a matter of seconds.

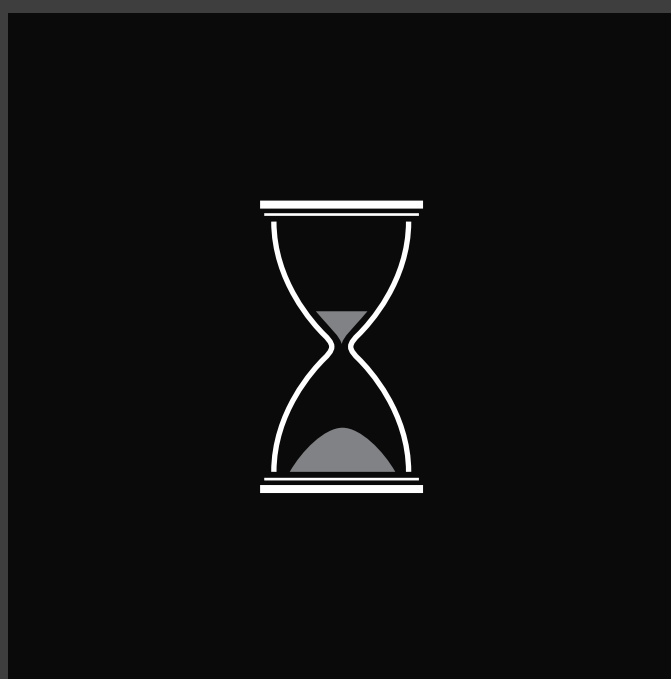


USING SENSEMOTION™ MODE 1: tilt your wireless controller to adjust vibration intensity. When the controller is horizontal, vibration intensity will be less. As you turn it to a 90 degree angle, vibration intensity will increase.



USING SENSEMOTION™ MODE 2: shake or rotate your wireless controller to change vibration intensity. Moving in circular motions also increases intensity, and the more varied and faster your movements, the more your Insignia will respond.

SENSEMOTION™ MODE 1

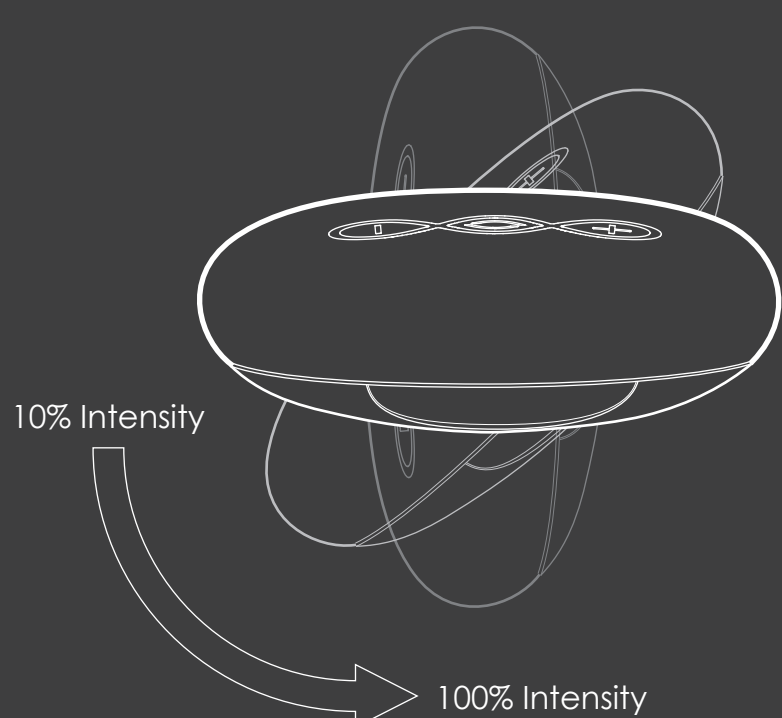

SENSEMOTION™ MODE 2



Press the **(∞)** to enjoy the additional 6 stimulation patterns on your Pleasure Object, and continue pressing to cycle through the modes. All the while **+** and **-** can be used to find the intensity that is right for you.